



FRONT: **INTERNAL MOUNT** · REAR: **INTERNAL MOUNT**

Toyota Coaster (2017+)

School Bus Light Kit — Installation Guide



BEFORE YOU START

- Read every step in full before beginning any wiring or drilling.
- Disconnect the battery negative terminal before making any connections.
- Two-person job recommended when feeding the loom through the headlining and A-pillar.
- Always verify door-sensor polarity (Section 2.4) with a multimeter before connecting — incorrect polarity will not trigger the warning lights correctly.

KIT ITEMS

1. SB001B Front Wig-Wag lights
2. SB001B Rear Wig-Wag lights
3. LCM100 Electronic control box
4. SBKIT1 Complete loom
5. SB7718 Front signage
6. MC3040 Rear signage
7. Dash switch
8. Door sensor assembly


TOOLS & MATERIALS

- 18–20mm hole saw
- Wire strippers & terminal crimper
- Cable ties
- Trim removal tool
- Multimeter (polarity check)
- Supplied 2-pin & 3-pin connectors

PACKAGE CONTENTS

							
SB001B Front light	SB001B Rear light	LCM100 Control box	Dash switch	SB7718 — SCHOOL BUS sign	MC3040 — Mother & child sign	SBKIT1 — Loom	RELAY — Coaster relay

SUGGESTED CABLE RUNS

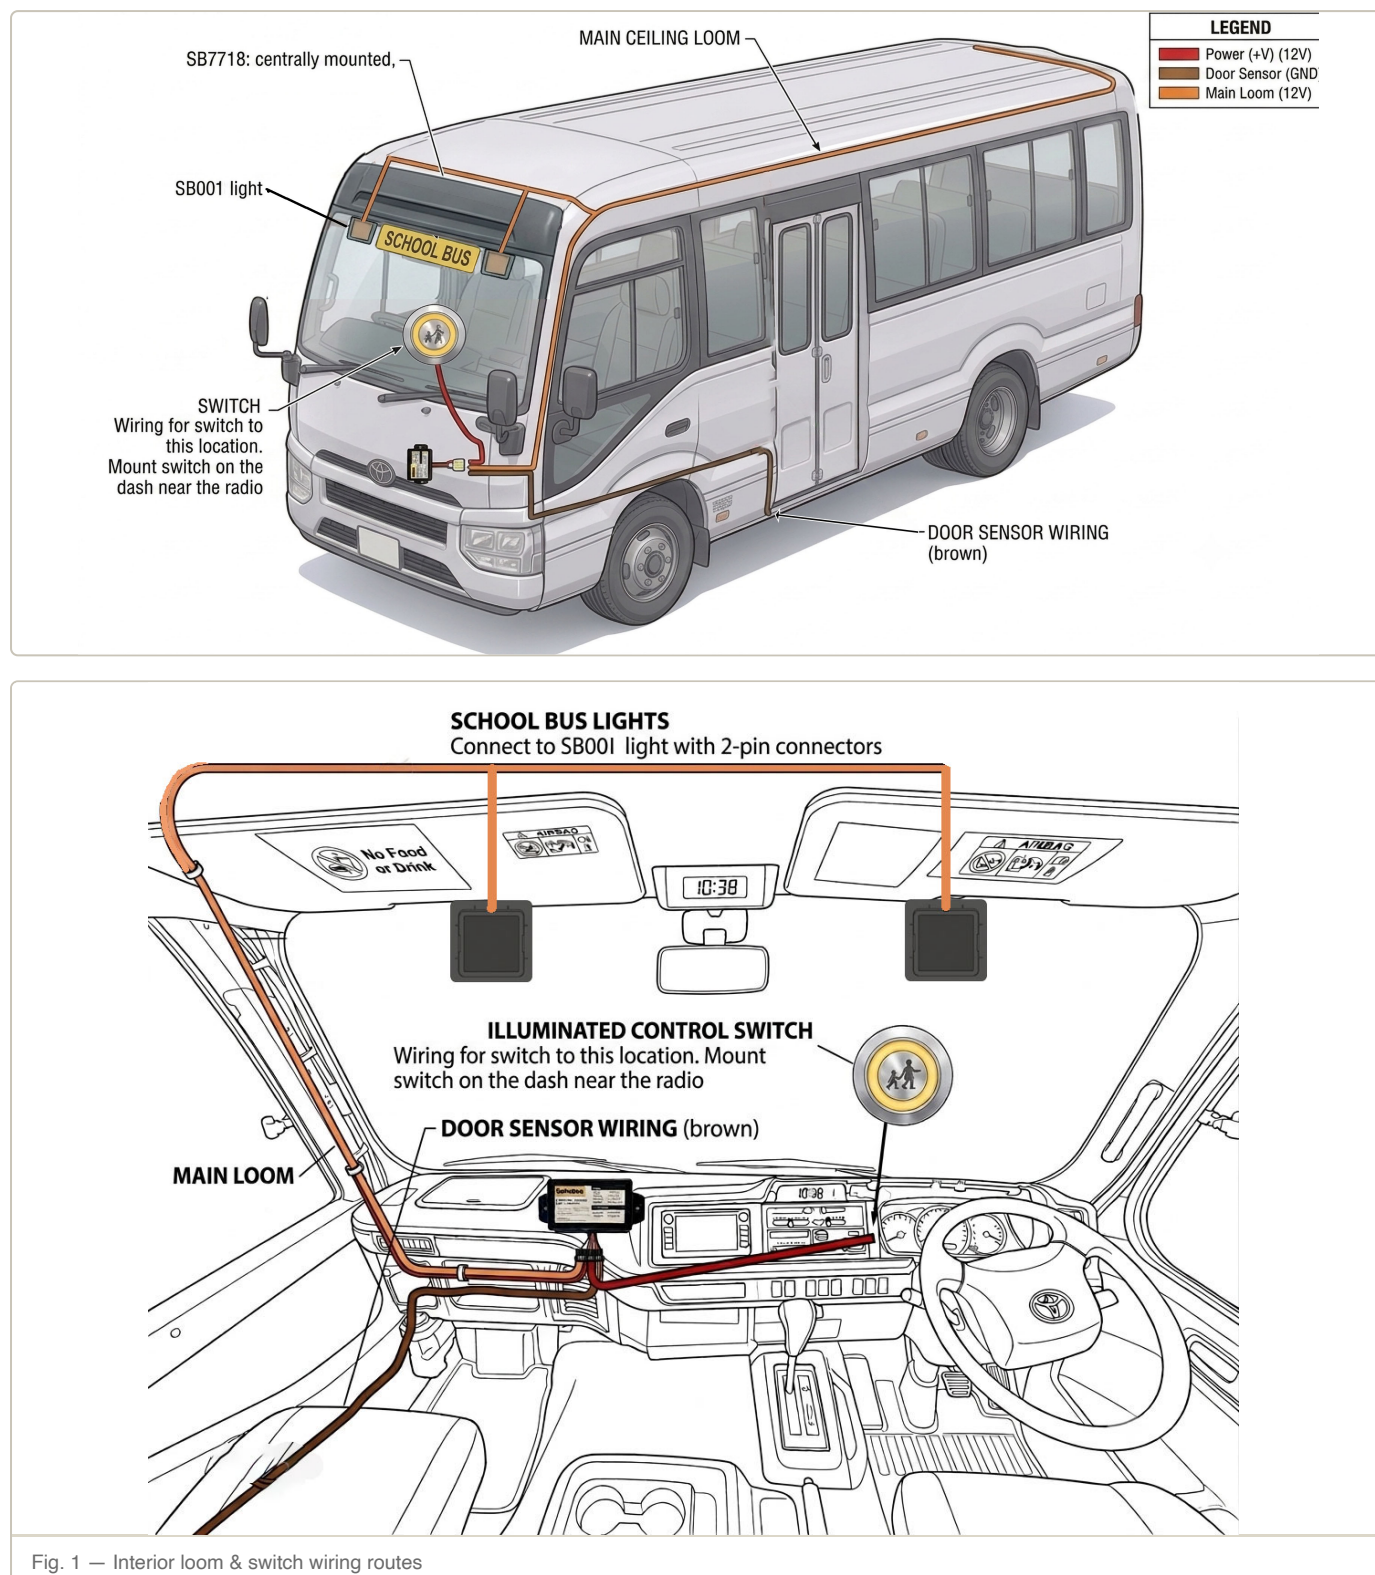

Tip: to make loom installation easier, cut it at the white tag markers, feed it through the bus, then rejoin using the supplied 3-pin connectors.

1 Signage & lights

1.1 — Front signage & lights

1. Stick the SCHOOL BUS sign centrally at the top of the windscreen, see Fig 3 for reference.
2. From the inside of the windscreen, attach the **SB001B** front lights on either side of the SCHOOL BUS signage, mounting them within 100mm of the sign.
3. Run the cables from the lights up into the headlining
4. Remove the climate vent above the driver. Locate the light cables that were inserted through the headlining and pull them through.
5. Use the supplied 2-pin connectors to connect the lights to the main loom (see Step 2 for loom runs)




Fig. 3 — Sign & lights fitted, front view

1.2 — Rear signage & rear lights

1. As there are barn doors at the back of the Coaster, cut the decal to the right of the foot of the larger figure on the decal & attach on the right side of the bus (driver's side). See Fig. 4 for reference
2. Stick the lights on the inside of the rear glass, making sure that both lights are no more than 100mm away from the decal & the same distance to the decal. The right side light will fit comfortably in the small panel, see Fig 4 for reference.
3. Right light: run the cable inside the trim around the window
Left light: open the right barn door and remove the lower door trim and blue plastic. Drill 3 holes as per Fig 5. Stick the light to the glass & run cables inside the door frame and then through to the bus.
4. Connect the lights to the main loom using the supplied 2-pin connectors



Fig. 4 — Rear decal placement, barn doors

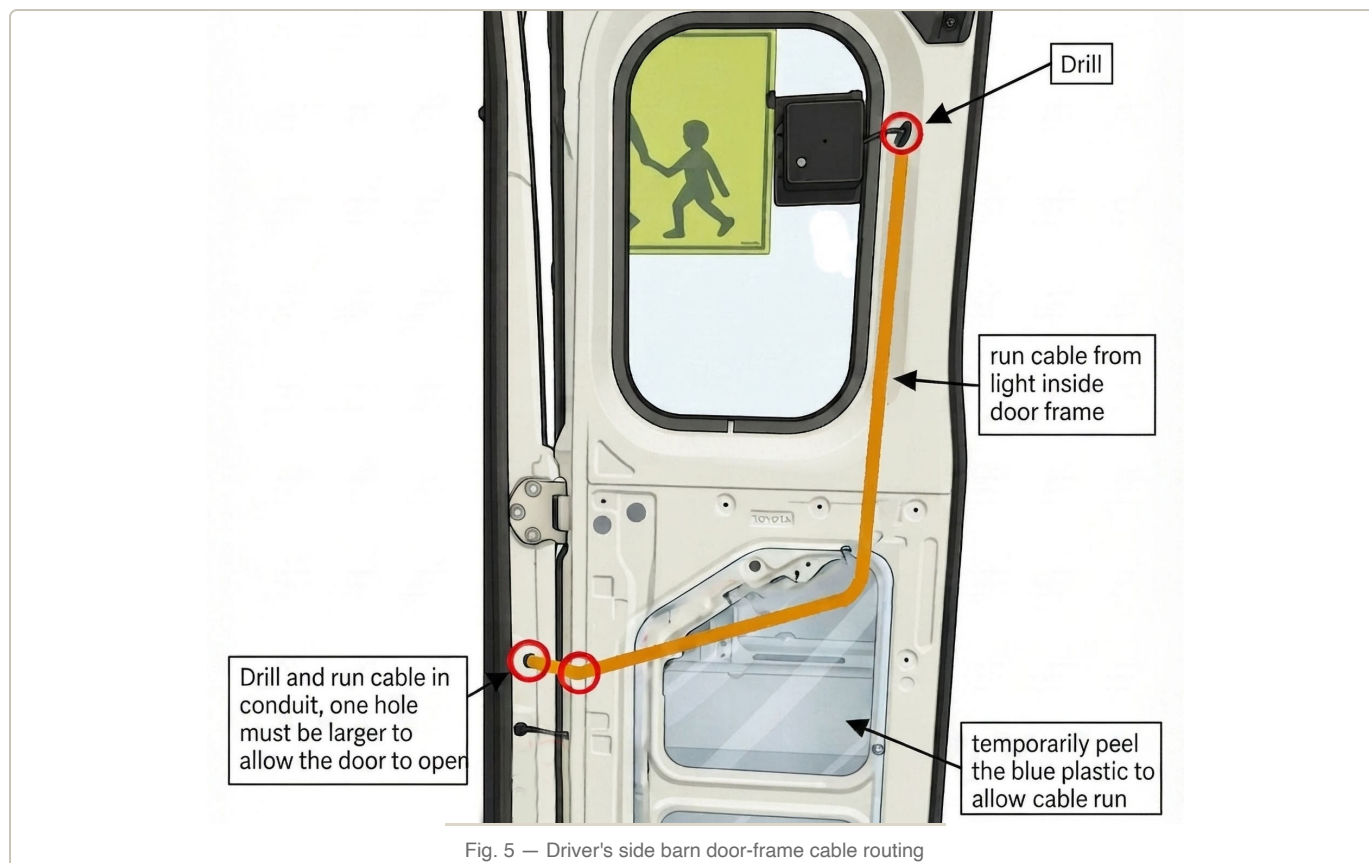

2 Wiring

Tip: Refer to Fig 1 on page 2 for additional information on suggested cable runs before starting

2.1 — Front to back


1. Remove the plastic trim around the glove box and A-pillar moulding.
2. Run the loom from the top of the A-pillar to the rear of the bus through the headlining or air vents. This is typically the point where the loom is cut and rejoined with the 3-pin connectors.
3. At the rear of the bus, the loom may also be cut to ease passage through to the rear lights

2.2 — Glove box area

1. Below the glove box, connect the black GND wire to ground.
2. One power option is below the glove box. Connect the red +V wire to a fuse in the fuse box. Check with a multimeter for ignition power.
3. Connect the supplied 6-way connector to the switching box.

2.3 — Switch

1. Using an 18–20mm hole saw, cut a hole in the dash and insert the supplied switch. See Fig 6 for suggested position
2. Connect the switch to the grey connector

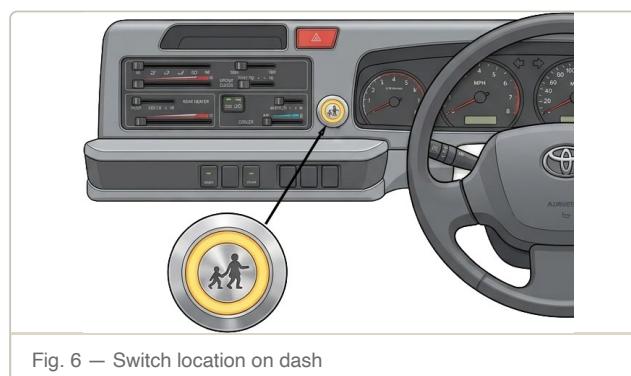

2.4 — Door sensor

The door sensor is connected via the supplied relay. Connect the black wire to ground and run the twin core cable to the light near the swing/concertina door footwell. Connect the red wire to one side of the light and the black wire to the other side.